

## Technical Specifications

|                                   |   |
|-----------------------------------|---|
| <b>Power supply</b>               | 2x 1.5V AA batteries  |
| <b>Battery lifetime</b>           | up to 2 years   |
| <b>Interface</b>                  | Loxone Air:<br>868MHz (SRD Band Europe),<br>4 channels available<br>max. Power 15.1mW e.r.p.<br>915MHz (ISM Band Region 2),<br>10 channels available<br>max. Power 13.2mW |
| <b>Ambient Temperatures</b>       | 0 ... 50°C / 32 ... 122°F   |
| <b>Humidity</b>                   | max. 95% r.H. (non condensing)  |
| <b>Safety rating</b>              | IP20  |
| <b>Maintenance &amp; Cleaning</b> | This device is free of<br>maintenance and must only<br>be cleaned with a dry cloth.   |

## Information

Contains FCC ID: 2ARRV-000376

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received,  
including interference that may cause undesired operation



For more information  
about this product, visit  
[loxone.com/window-handle-air](https://loxone.com/window-handle-air)

**Loxone  
Electronics GmbH**  
Smart Home 1  
4154 Kollerschlag  
Austria

**Loxone UK**  
The Forum  
Station Road  
Theale, RG7 4RA  
United Kingdom



For additional information,  
declaration of conformity, visit  
[www.loxone.com/datasheets](https://www.loxone.com/datasheets)

V260123

Need Help?  
[loxone.com/support](https://loxone.com/support)



# Window Handle Air

**Part No.: 100177**

## About the product

The Loxone Window Handle Air detects if a window has been left unsecured based on the three positions of the the handle -> closed, open, tilt.

Additionally an internal sensor can detect vibrations and alert you if the window is forcefully opened. It can be used to control a variety of non safety critical functions in your smart home, however, we recommend it is configured according to the Loxone Standard.

## Installation & electrical connection

Adjust the length of the square spindle to the required length and lock in place by tightening the fixing screw using the provided hex key. Next use the appropriate length mounting screws to secure the handle on the window frame.

Power up your Window Handle Air by using the provided AA batteries. The Window Handle Air will now go immediately into pairing mode for the pairing with the Miniserver.

To finish the installation, push the cover towards the window frame.

## To open

Hold cover on both sides and gently pull towards you.

## Spindle to screw ratio

|                             |                     |           |
|-----------------------------|---------------------|-----------|
| <b>Spindle length in mm</b> | 32 / 37mm           | 43mm      |
| <b>Screw length in mm</b>   | 40 & 50mm           | 50 & 60mm |
| <b>Square spindle</b>       | 7mm                 |           |
| <b>Locking</b>              | 4x 90° ball locking |           |

